



Overcoming Overdrive Recovery on High-Speed Digital Storage Oscilloscopes

Application Note

Who Should Read This Application Note?

This application note provides valuable measurement technique information for engineers and technicians that want to make the most accurate vertical and timing measurements possible using a high-speed, real-time Digital Storage Oscilloscope (DSO).

Introduction

When making critical signal integrity measurements of high-speed digital signals, it may be necessary to measure the small aberrations on the top and bottom of the signals. Examples of these measurements include overshoot, undershoot, and overall ripple. A common technique often employed by oscilloscope users to increase the effective resolution and accuracy of these types of measurements is to offset the signal under test and then increase the vertical sensitivity around the waveform portion of interest. This will spread out the small aberrations of the signal over a larger range of the scope's A/D converter.

This technique definitely improves the resolution of the measurement on the signal's small aberrations. Intuitively you might think that it also improves the accuracy. However, offsetting and expanding the signal over a wider range will drive major portions of the signal off-screen and beyond the dynamic range of the oscilloscope's input amplifier and A/D converter. When this happens, the scope's amplifier can be driven into saturation, causing waveform distortions.

There is a misconception that some oscilloscopes can tolerate overdrive conditions, whereas others cannot. This application note will show ripple measurements on a high-speed digital signal using 6 GHz, real-time oscilloscopes from two different vendors, Agilent Technologies and Tektronix, Inc. We will show the inaccuracy of these measurements when the scope's amplifier is overdriven, and then show the proper technique to make the same measurement accurately without overdriving the amplifier.



Agilent Technologies

Problem: Overdriving the Scope Amplifier

Figure 1 shows a 500 MHz clock signal captured using a Tektronix TDS6604 oscilloscope. In this case, the signal has been captured with the waveform scaled within the scope's 10 divisions of dynamic range. With approximately 5 divisions of peak-to-peak deflection at 100 mV/div, the entire waveform has been optimally scaled to be fully on-screen.

Even though full screen is 8 divisions high, the scope's 8-bit A/D converter is actually spread across 10 vertical divisions (2 divisions of the A/D's dynamic range are off-screen). Consequently, for this particular measurement we are using just half (7 bits) of the scope's 8-bit A/D converter. But if we are primarily interested in accurately measuring the peak-to-peak ripple on the bottom of this signal, then we are using an even smaller portion of the A/D converter. With the scope's voltage markers, we have measured the ripple on this signal to be approximately 74 mV peak-to-peak. However, we are only using about 7 percent of the scope's A/D converter range for this measurement, meaning that our measurement has a resolution of just slightly greater than 4 bits relative to the peak-to-peak swing of the ripple.

To improve the resolution and apparent accuracy of this ripple measurement, we have used the scope's vertical dc offset capability and then increased the vertical sensitivity to 20 mV/div in order to zoom in on the bottom portion of the signal (Figure 2). This should give us a 5X improvement in absolute measurement resolution.

When comparing the differences between the waveforms captured and displayed in Figures 1 and 2, we can see obvious distortions in the captured waveform in Figure 2. The first negative overshoot peak in Figure 2 now has less negative amplitude than later perturbations in the signal, as compared to our original measurement (Figure 1) with the waveform scaled to be fully on-screen.

It would be pointless to perform another peak-to-peak ripple measurement for comparison since we would be measuring signal aberrations

caused by amplifier distortion, not real signal aberrations. Even though the resolution of the second measurement has been improved over our first measurement, the accuracy has been degraded due to driving the scope's input amplifier into saturation and thereby inducing signal distortions. Our original intent was to improve measurement resolution and accuracy with the second zoomed-in measurement. But in fact, this measurement technique has degraded our measurement accuracy.

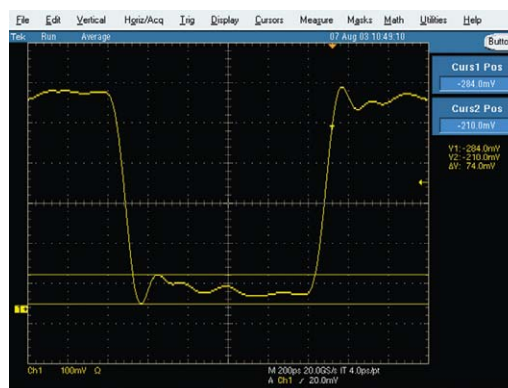


Figure 1. Ripple captured at 100 mV/div on a Tektronix TDS6604 scope.

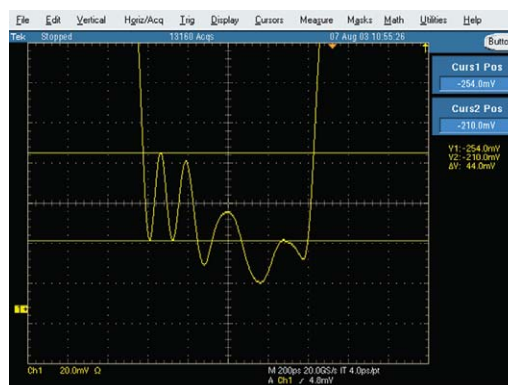


Figure 2. Ripple captured at 20 mV/div on a Tektronix TDS6604 with 5X resolution improvement and signal distortion due to an overdriven amplifier.

Solution: Keeping within the Specified Dynamic Range

The problem with this vertically expanded measurement is that we violated the dynamic range specification of the oscilloscope. Most vendors specify the dynamic range of their oscilloscopes. This specification is usually in the range of \pm divisions to \pm divisions (depending on the scope). For accurate and non-distorted measurements on high-speed digital signals, signals should not be scaled beyond the specified dynamic range of the oscilloscope. To insure that the signal is properly scaled within the dynamic range of the oscilloscope to avoid signal distortions, simply scale the signal for maximum peak-to-peak deflection, but still keep it fully on-screen.

Some scope vendors also specify overdrive recovery time (sometimes called “step response settling error”). Overdrive recovery is the time required for a signal to recover from distortion effects if the dynamic range of the scope is violated.

For the Tektronix TDS6604, the specification states that overdriven signals will recover/settle to within 2 percent of their correct amplitude within 20 nanoseconds. But for high-speed digital signals, 20 nanoseconds can be a very long time. And for the measurement examples shown in this application note, 20 nanoseconds is much longer than the pulse itself. The negative width of this pulse is only 1 nanosecond wide. Basically, the overdrive recovery specification should be a warning to the user to never overdrive the scope’s input amplifier when making critical vertical and timing measurements on high-speed digital signals.

Let’s now look at these same measurements on an Agilent 54855A 6 GHz, real-time oscilloscope. Figure 3 shows this same 500 MHz clock signal properly scaled to be fully on-screen with a vertical sensitivity setting of 100 mV/div. Measuring the peak-to-peak ripple using the scope’s voltage markers, we again measure approximately 74 mV of peak-to-peak ripple. But with the signal scaled to be fully on-screen, we are using a relatively small portion of the A/D’s dynamic range to measure this ripple, which is the same situation we encountered on the Tektronix oscilloscope. So, let’s now expand the vertical sensitivity to 20 mV/div and see what happens on the Agilent scope.



Figure 3. Ripple captured at 100 mV/div on an Agilent 54855A scope.

The specified dynamic range of the 54855A oscilloscope is ± 4.0 divisions. However, Agilent does not specify the overdrive recovery/settling time if the dynamic range of the oscilloscope is violated. The 54855A oscilloscope has been optimized for the most accurate measurements with the signal always scaled on-screen. Agilent

File Setup Measure Analyze Utilities Help 12:06 PM

20.0 GS/s 20.0 mV 64

0m 0m 0m 0m

200 ps 516.9 ps 1 mV

	0	1
R	485 ps	485 ps
R	219.0 mV	219.0 mV
1/ΔS	65.20 mV	65.20 mV

Figure 4. Ripple captured at 20 mV/div on an Agilent 54855A scope with improved resolution and similar signal distortion.

Increasing Signal Resolution and Accuracy Using Waveform Averaging and Math Functions

Figure 5 shows the proper measurement method using the Agilent 54855A oscilloscope. This same measurement technique can also be used on scopes from both Tektronix and LeCroy Corp. Using waveform averaging, measurement resolution on small signal perturbations can be increased significantly (11 to 12 bits relative to full-screen). Unfortunately, display resolution on most DSOs is limited to approximately 8 to 9 bits.

In order to see and more accurately measure these small perturbations after averaging, you should use the scope's waveform math functions to digitally magnify the waveform around the signal portions of interest. With the input signal scaled to be within the scope's dynamic range (yellow/bottom trace), digital magnification performs a software expansion of the captured and averaged waveform (green/top trace) to reveal additional vertical resolution beyond the 8-bit resolution of the scope's A/D converter.

This technique does not overdrive the input amplifiers and will not induce any signal distortions due to oscilloscope amplifier saturation. The net result is a higher resolution and more accurate measurement of small perturbations on larger signals. With digital magnification set to 20 mV/div (5X expansion), we now measure approximately 74.3 mV of peak-to-peak ripple. This should be a more accurate measurement than our original 74 mV measurement.

If repetitive averaging is not possible due to a single-shot or transient input signal, then your measurements will be limited to the 8-bit vertical resolution of the scope's A/D converter with the signal scaled to be fully on-screen. You should not attempt to expand the waveform and drive portions of the signal beyond the scope's specified dynamic range. This technique may induce signal distortions resulting in less accurate measurements.

Conclusion

There is a familiar American joke where a patient says to his doctor, "Doctor, it hurts when I bang my head against the wall." The doctor then responds, "Well then, don't bang your head against the wall." The same could be said about the problems associated with overdriving a scope's input amplifier. If you don't want to make inaccurate measurements, then don't overdrive the amplifier! Use waveform averaging and digital magnification to make the most accurate measurements on signal perturbations, whether you are using a Tektronix, LeCroy, or Agilent high-speed oscilloscope.

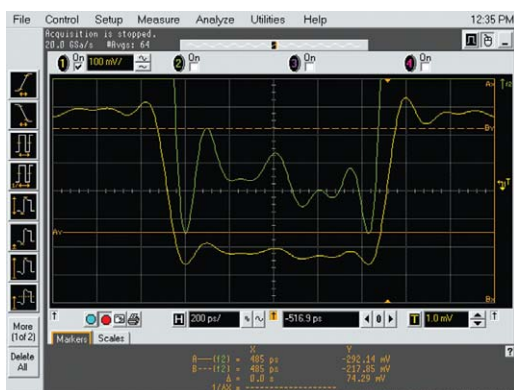


Figure 5. Ripple measurement on an Agilent 54855A scope using waveform averaging and math functions to increase resolution and accuracy.



Agilent Technologies Oscilloscopes

Multiple form factors from 20 MHz to >90 GHz | Industry leading specs | Powerful applications



Agilent Email Updates

www.agilent.com/find/emailupdates

Get the latest information on the products and applications you select.



www.axistandard.org AdvancedTCA® Extensions for Instrumentation and Test (AXIe) is an open standard that extends the AdvancedTCA for general purpose and semiconductor test. Agilent is a founding member of the AXIe consortium.



www.lxistandard.org

LAN eXtensions for Instruments puts the power of Ethernet and the Web inside your test systems. Agilent is a founding member of the LXI consortium.



www.pxisa.org

PCI eXtensions for Instrumentation (PXI) modular instrumentation delivers a rugged, PC-based high-performance measurement and automation system.

Agilent Channel Partners

www.agilent.com/find/channelpartners

Get the best of both worlds: Agilent's measurement expertise and product breadth, combined with channel partner convenience.

Windows® is a U.S. registered trademark of Microsoft Corporation.

Agilent
Advantage
Services



Agilent Advantage Services is committed to your success throughout your equipment's lifetime. We share measurement and service expertise to help you create the products that change our world. To keep you competitive, we continually invest in tools and processes that speed up calibration and repair, reduce your cost of ownership, and move us ahead of your development curve.

www.agilent.com/find/advantageservices

Agilent Electronic Measurement Group
KEMA Certified
ISO 9001:2008
Quality Management System
www.agilent.com/quality

www.agilent.com

www.agilent.com/find/scopes

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

www.agilent.com/find/contactus

Americas

Canada	(877) 894 4414
Brazil	(11) 4197 3500
Mexico	01800 5064 800
United States	(800) 829 4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 375 8100

Europe & Middle East

Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700*
*0.125 €/minute	
Germany	49 (0) 7031 464 6333
Ireland	1890 924 204
Israel	972-3-9288-504/544
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
United Kingdom	44 (0) 131 452 0200

For other unlisted countries:

www.agilent.com/find/contactus

Revised: June 8, 2011

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2011
Published in USA, December 15, 2011
5989-0068EN



Agilent Technologies