

FEATURES

- $1.2\mu\text{V}_{\text{P-P}}$ Noise
- $2\mu\text{V}/\sqrt{\text{kHr}}$ Long Term Stability
- Very Low Hysteresis
- $0.05\text{ppm}/^\circ\text{C}$ Drift
- Temperature Stabilized

APPLICATIONS

- Voltmeters
- Calibrators
- Standard Cells
- Scales
- Low Noise RF Oscillators

DESCRIPTION

The LTZ1000 and LTZ1000A are ultra stable temperature controllable references. They are designed to provide 7V outputs with temperature drifts of $0.05\text{ppm}/^\circ\text{C}$, about $1.2\mu\text{V}_{\text{P-P}}$ of noise and long term stability of $2\mu\text{V}/\sqrt{\text{kHr}}$.


Included on the chip is a subsurface Zener reference, a heater resistor for temperature stabilization, and a temperature sensing transistor. External circuitry is used to set operating currents and to temperature stabilize the reference. This allows maximum flexibility and best long term stability and noise.

The LTZ1000 and LTZ1000A references can provide superior performance to older references such as the LM199 at the expense of increased circuit complexity and thermal layout considerations. The LTZ1000 is packaged in a standard TO-99 package while the LTZ1000A utilizes a proprietary high thermal resistance die attach which eases thermally insulating the reference.


LT, LTC and LT are registered trademarks of Linear Technology Corporation.

TYPICAL APPLICATION

Low Noise Reference

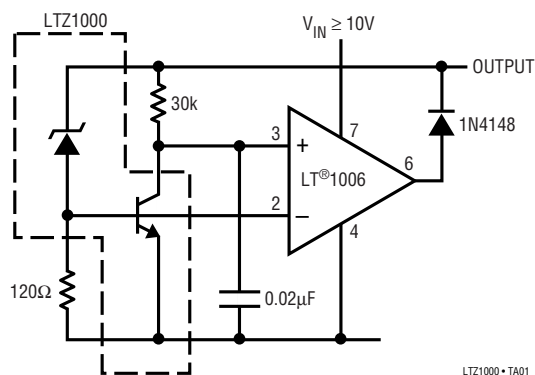

Long Term Stability

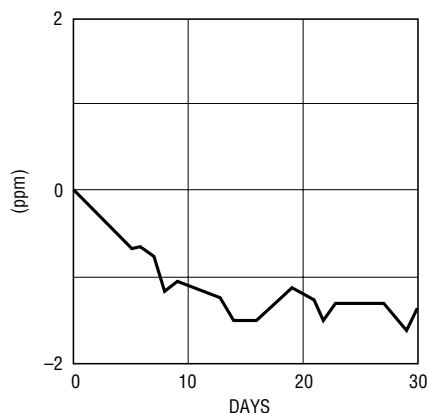

LONG TERM STABILITY OF A TYPICAL DEVICE FROM TIME = 0
WITH NO PRECONDITIONING OR AGING


LTZ1000 • GR01

ABSOLUTE MAXIMUM RATINGS

(Note 1)

Heater to Substrate	35V
Collector Emitter Breakdown Q1	15V
Collector Emitter Breakdown Q2	35V
Emitter Base Reverse Bias	2V
Operating Temperature Range	$-55^{\circ}\text{C} \leq T_A \leq 125^{\circ}\text{C}$
Storage Temperature Range	$-65^{\circ}\text{C} \leq T_A \leq 150^{\circ}\text{C}$
Substrate Forward Bias	0.1V

PACKAGE/ORDER INFORMATION

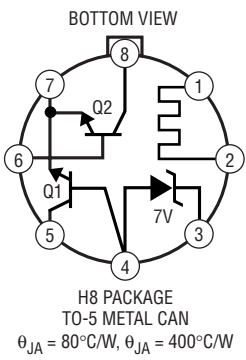 <p> BOTTOM VIEW H8 PACKAGE TO-5 METAL CAN $\theta_{JA} = 80^{\circ}\text{C/W}$, $\theta_{JA} = 400^{\circ}\text{C/W}$ </p>	ORDER PART NUMBER
	LTZ1000ACH LTZ1000CH

LTZ1000 • P0101

Consult LTC Marketing for parts specified with wider operating temperature ranges.

ELECTRICAL CHARACTERISTICS (Note 2)

PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
Zener Voltage	$I_Z = 5\text{mA}$, $(V_Z + V_{BE_{Q1}})$ $I_{Q1} = 100\mu\text{A}$	7.0	7.2	7.5	V
	$I_Z = 1\text{mA}$, $(V_Z + V_{BE_{Q1}})$ $I_{Q1} = 100\text{A}$	6.9	7.15	7.45	V
Zener Change with Current	$1\text{mA} \leq I_Z < 5\text{mA}$		80	240	mV
Zener Leakage Current	$V_Z = 5\text{V}$		20	200	μA
Zener Noise	$I_Z = 5\text{mA}$, $0.1\text{Hz} < f < 10\text{Hz}$ $I_{Q1} = 100\mu\text{A}$		1.2	2	$\mu\text{V}_{\text{P-P}}$
Heater Resistance	$I_L \leq 100\mu\text{A}$	200	300	420	Ω
Heater Breakdown Voltage		35			V
Transistor Q1 Breakdown	$I_C = 10\mu\text{A}$, LVCEO	15	20		V
Transistor Q2 Breakdown	$I_C = 10\mu\text{A}$, LVCEO	35	50		V
Q1, Q2 Current Gain	$I_C = 100\mu\text{A}$	80	200	450	
Thermal Resistance	LTZ1000 Time = 5 Minutes		80		$^{\circ}\text{C/W}$
	LTZ1000A Time = 5 Minutes		400		$^{\circ}\text{C/W}$
Long Term Stability	$T = 65^{\circ}\text{C}$		2		$\mu\text{V}/\sqrt{\text{kHr}}$

Note 1: Absolute Maximum Ratings are those values beyond which the life of a device may be impaired.

Note 2: All testing is done at 25°C . Pulse testing is used for LTZ1000A to minimize temperature rise during testing. LTZ1000 and LTZ1000A devices are QA tested at -55°C and 125°C .

PIN FUNCTIONS

Pin 1: Heater positive. Must have a higher positive value than Pin 4 and less than 40V.

Pin 2: Heater negative. Must have a higher positive value than Pin 4 and less than 40V.

Pin 3: Zener positive. Must have a higher positive value than Pin 4.

Pin 4: Substrate and Zener negative. Must have a higher positive value than Pin 7. If Q1 is Zenered (about 7V) a permanent degradation in beta will result.

Pin 5: Temperature compensating transistor collector.


Pin 6: Temperature sensing transistor base. If the base emitter junction is Zenered (about 7V) the transistor will suffer permanent beta degradation.

Pin 7: Emitter of sensing and compensating transistors.

Pin 8: Collector of sensing transistor.


TYPICAL PERFORMANCE CHARACTERISTICS

Zener Voltage vs Current

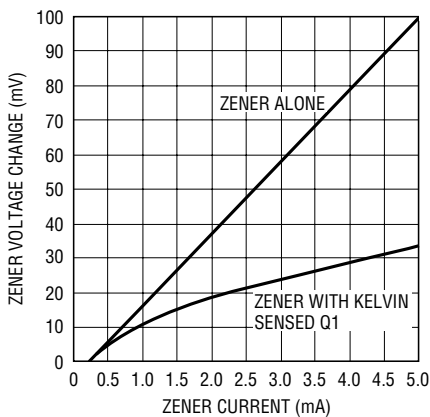


LTZ1000 • TPC01

Zener Voltage Noise Spectrum

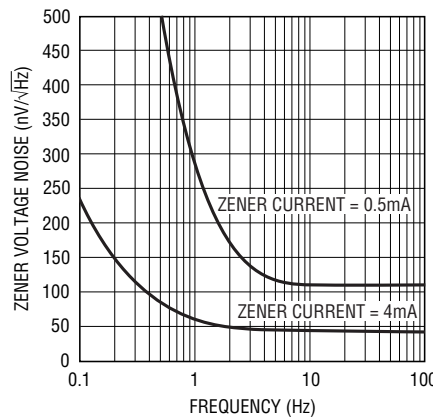


LTZ1000 • TPC02

Zener Noise

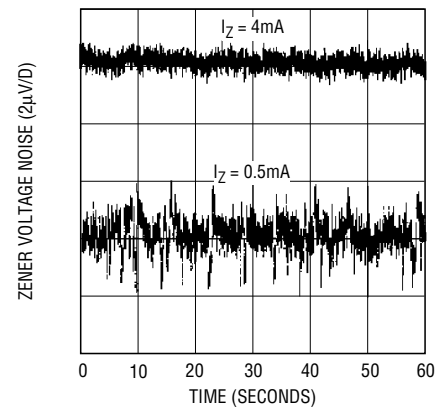


LTZ1000 • TPC03

Die Temperature Rise vs Heater Power

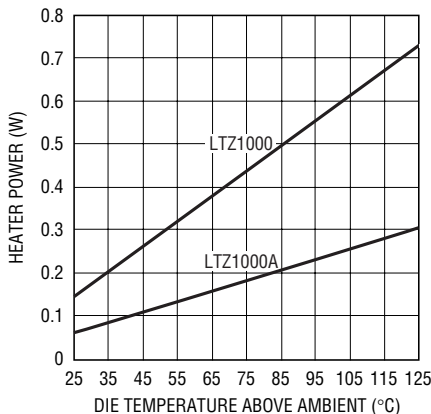


LTZ1000 • TPC04

Die Temperature vs Time

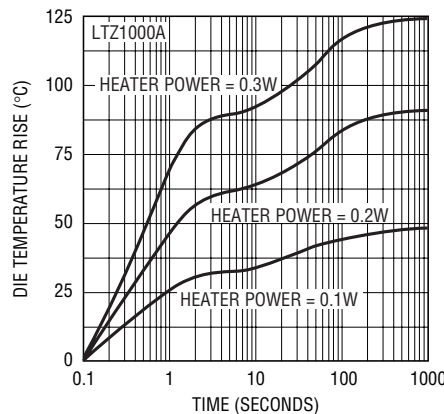

LTZ1000 • TPC05

Die Temperature Rise vs Time

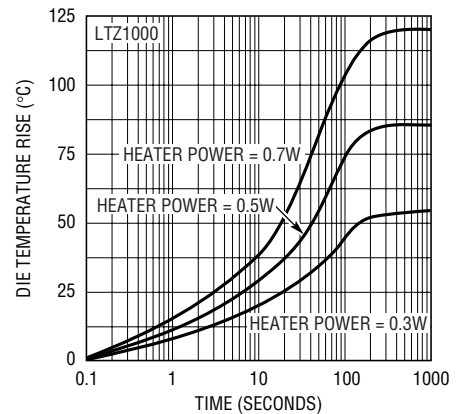

LTZ1000 • TPC06

APPLICATION HINTS

LTZ1000 and LTZ1000A are capable of providing ultimate voltage reference performance. Temperature drifts of better than 0.03ppm/°C and long term stability on the order of 1μV per month can be achieved. Noise of about 0.15ppm can also be obtained. This performance is at the expense of circuit complexity, since external influences can easily cause output voltage shifts of more than 1ppm.

Thermocouple effects are one of the worst problems and can give apparent drifts of many ppm/°C as well as cause low frequency noise. The kovar input leads of the TO-5 package form thermocouples when connected to copper PC boards. These thermocouples generate outputs of 35μV/°C. It is mandatory to keep the zener and transistor leads at the same temperature, otherwise 1ppm to 5ppm shifts in the output voltage can easily be expected from these thermocouples.

Air currents blowing across the leads can also cause small temperature variations, especially since the package is heated. This will look like 1ppm to 5ppm of low frequency noise occurring over a several minute period. For best results, the device should be located in an enclosed area and well shielded from air currents.

Certainly, any temperature gradient externally generated, say from a power supply, should not appear across the critical circuitry. The leads to the transistor and zener should be connected to equal size PC traces to equalize the heat loss and maintain them at similar temperatures. The bottom portion of the PC board should be shielded against air currents as well.

Resistors, as well as having resistance temperature coefficients, can generate thermocouple effects. Some types of resistors can generate hundreds of microvolts of thermocouple voltage. These thermocouple effects in the resistor can also interfere with the output voltage. Wire wound resistors usually have the lowest thermocouple voltage, while tin oxide type resistors have very high thermocouple voltage. Film resistors, especially Vishay precision film resistors, can have low thermocouple voltage.

Ordinary breadboarding techniques are not good enough to give stable output voltage with the LTZ1000 family devices. For breadboarding, it is suggested that a small printed circuit board be made up using the reference, the amplifier and wire wound resistors. Care must be taken to ensure that heater current does not flow through the same ground lead as the negative side of the reference (emitter of Q1). Current changes in the heater could add to, or subtract from, the reference voltage causing errors with temperature. Single point grounding using low resistance wiring is suggested.

Setting Control Temperature


The emitter-base voltage of the control transistor sets the stabilization temperature for the LTZ1000. With the values given in the applications, temperature is normally 60°C. Production variations in emitter-base voltage will typically cause about ±10°C variation. Since the emitter-base voltage changes about 2mV/°C and is very predictable, other temperatures are easily set.

The lowest temperature consistent with the operating environment should be used. Higher temperatures accelerate aging and decrease long term stability. The LTZ1000A should be set about 10°C higher than the LTZ1000. This is because normal operating power dissipation in the LTZ1000A causes a temperature rise of about 10°C. Of course both types of devices should be insulated from ambient. Several minutes of warm-up is usual.


For applications not requiring the extreme precision or the low noise of the LTZ1000, Linear Technology makes a broad line of voltage references. Devices like the LT1021 can provide drifts as low as 2ppm/°C and devices such as the LM399A can provide drifts of 1ppm/°C. Only applications requiring the very low noise or low drift with time of the LTZ1000 should use this device. Application help is available from Linear Technology.

TYPICAL APPLICATIONS


Negative Voltage Reference

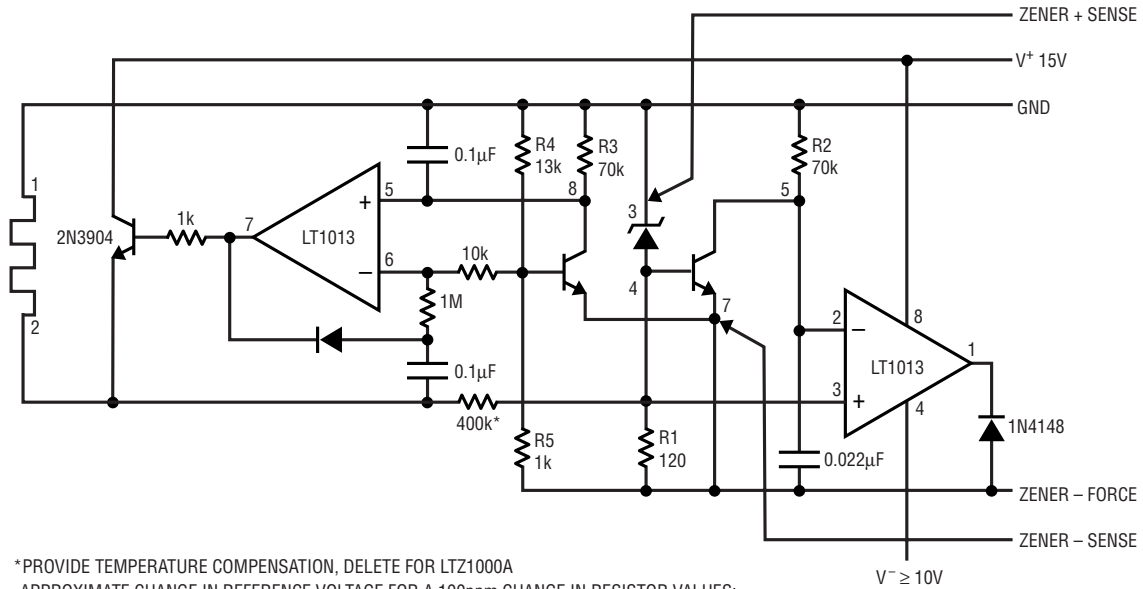

Averaging Reference Voltage for Lower Noise and Better Stability

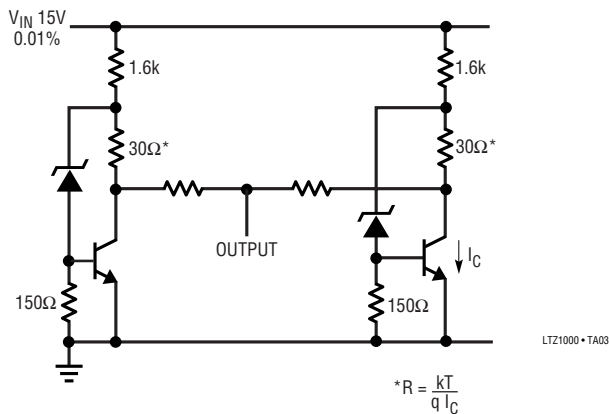


Improving Supply Rejection

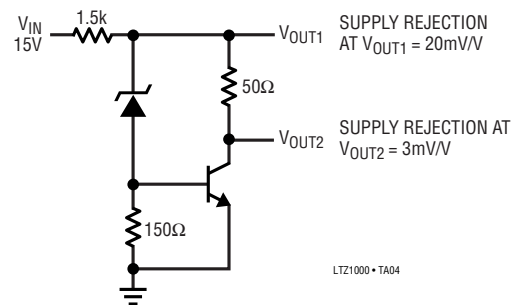

TYPICAL APPLICATIONS


Adjusting Temperature Coefficient in Unstabilized Applications

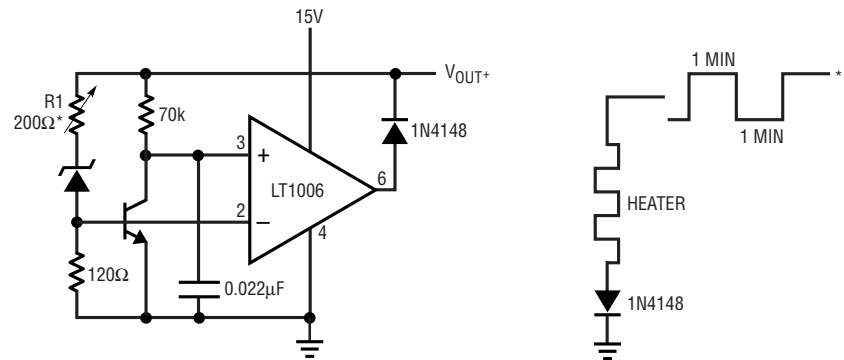

* PULSE HEATER ON AND OFF TO HEAT AND COOL THE REFERENCE. ADJUST R1 FOR MINIMUM VOLTAGE CHANGE THROUGH A TEMPERATURE CYCLE

LTZ1000 • TA05

7V Positive Reference Circuit

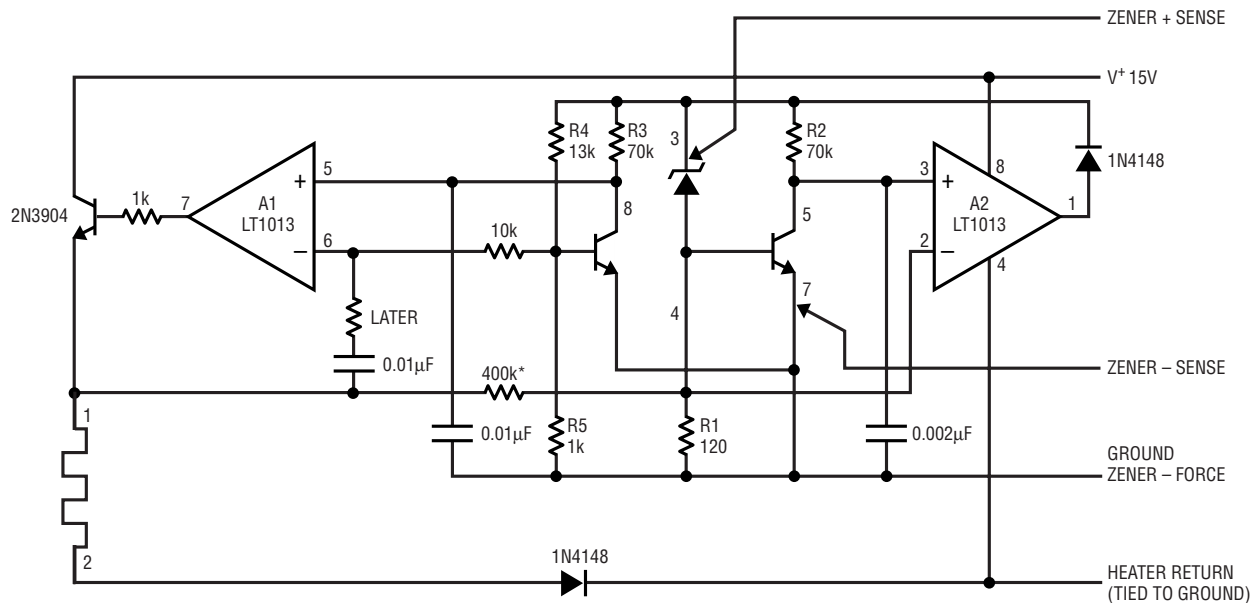


*PROVIDES TC COMPENSATION, DELETE FOR LTZ1000A
APPROXIMATE CHANGE IN REFERENCE VOLTAGE FOR A 100ppm (0.01%) CHANGE IN RESISTOR VALUES:

R1	$\Delta R(\Omega)$	ΔV_Z
R2	0.012 Ω	1ppm
R3	7 Ω	0.3ppm
R4/R5 RATIO	7 Ω	0.2ppm
	$\Delta R = 0.01\%$	1ppm

BOTH A1 AND A2 CONTRIBUTE LESS THAN 2 μ V OF OUTPUT DRIFT OVER A 50°C RANGE

LTZ1000 • TA06

BLOCK DIAGRAM

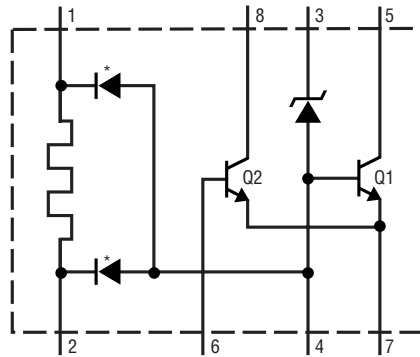


*SUBSTRATE DIODES—DO NOT FORWARD BIAS

LTZ1000 • TA07

PACKAGE DESCRIPTION

H Package
8-Lead TO-5 Metal Can (.200 Inch PCD)
 (Reference LTC DWG # 05-08-1320)

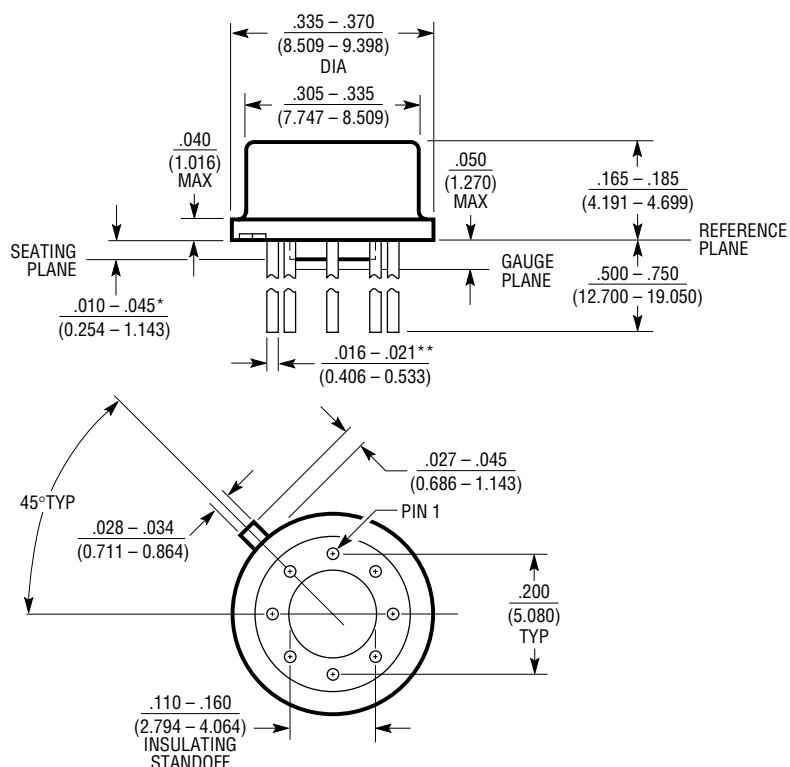

*LEAD DIAMETER IS UNCONTROLLED BETWEEN THE REFERENCE PLANE AND THE SEATING PLANE

**FOR SOLDER DIP LEAD FINISH, LEAD DIAMETER IS $\frac{.016 - .024}{(0.406 - 0.610)}$ H8(TO-5) 0.200 PCD 0801

RELATED PARTS

PART NUMBER	DESCRIPTION	COMMENTS
LT1236	Ultralow Drift Precision Reference	5V and 10V Versions

This datasheet has been download from:

www.datasheetcatalog.com

Datasheets for electronics components.